


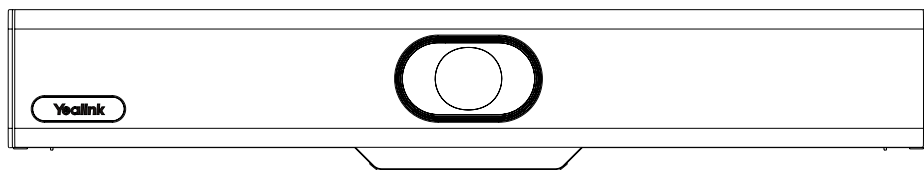

USB Video Conferencing Endpoint UVC34



English | 简体中文 | Deutsch | Français | Español

Quick Start Guide(V1.2)


Package Contents



UVC34




 VCR20 Remote Control




(7m, 22.97ft)

 USB 2.0 (A - B) Cable



(3.5m, 11.48ft)

 Power Adapter (48V/0.7A)



Mounting Bracket



× 2

φ6 * 30 mm, white, Polyamide



× 2

T4*30mm FAHOZN3+ (+)



1/4inch*12mm



(L70*W50mm)

Velcro



× 5

(20 * 200 mm)

Cable Ties



Quick Start Guide

Note: We recommend that you use the accessories provided or approved by Yealink. The unapproved third-party accessories may result in reduced performance.




UVC34 Installation

• Put on a Flat Surface


You can put the UVC34 on the conference table.

• Mount on top of a display


Choose the following installation method when the thickness of the TV is between 5mm and 60mm.

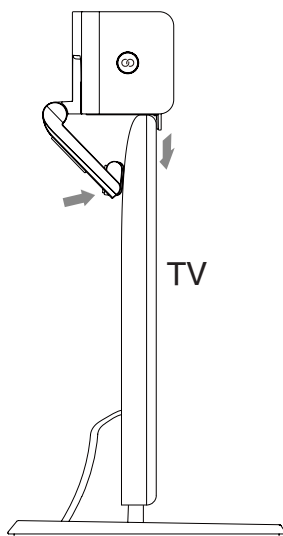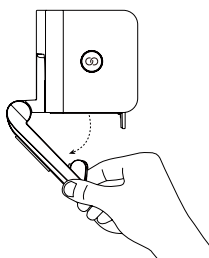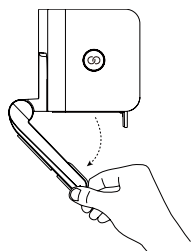

You can use 3M Velcro behind the display to ensure the stability of UVC34.

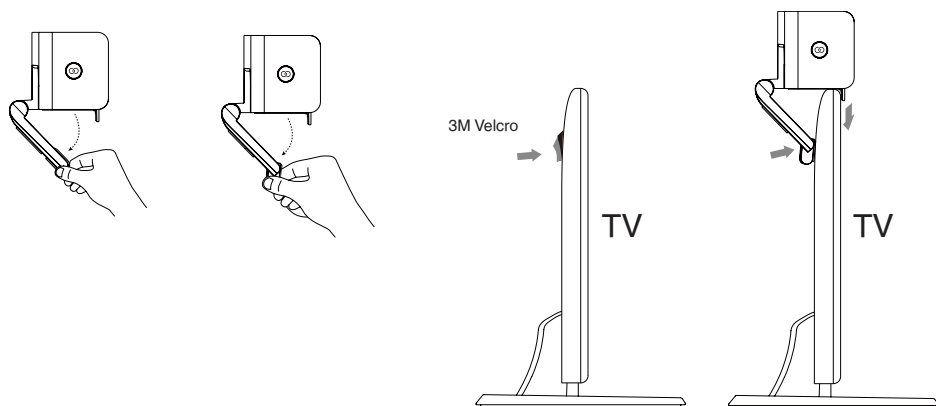


• Mount on the Wall

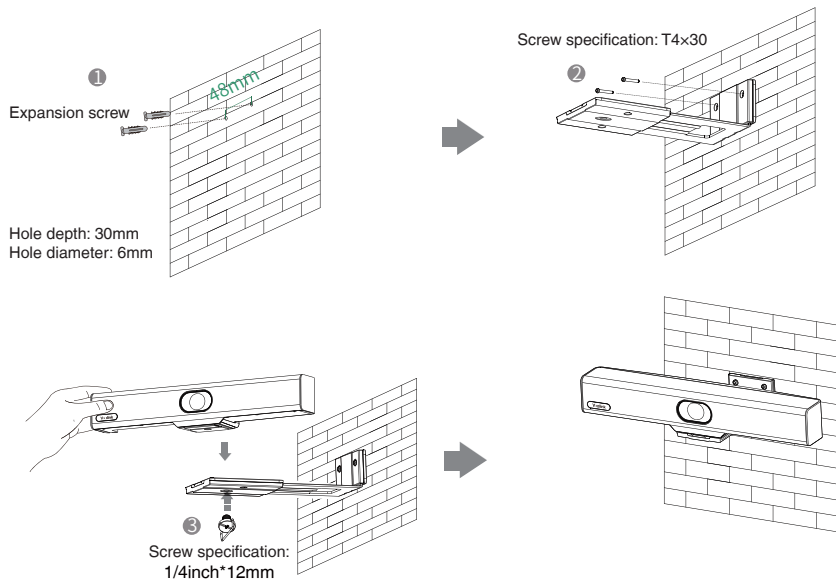


• Mount onto a TV Stand or a Tripod

You need to purchase a TV stand or a tripod separately. The TV stand or a tripod should be able to bear the weight of at least 5kg.

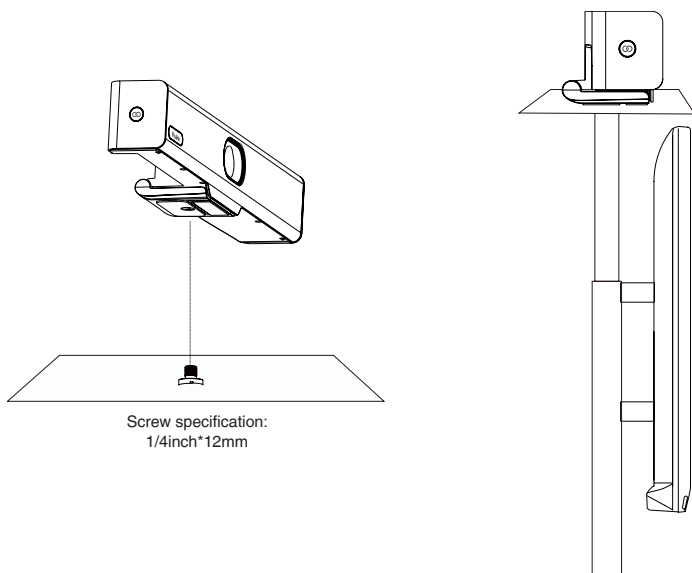


Hardware Interface Instructions

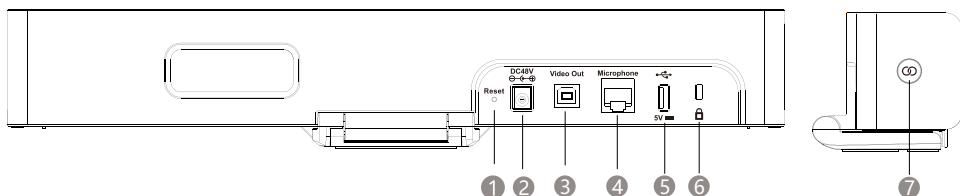

No.	Item	Description
1	Reset	Reset the UVC34 to factory defaults.
2	DC48V	Connect to the power adapter.
3	Video Out	Connect to a PC as video output.
4	Microphone	Reserved port.
5	USB	Reserved port.
6	Security slot	Connect a universal security cable to the UVC34 so that you can lock the UVC34 down.
7	Pairing key	Reserved key.

UVC34 Connection

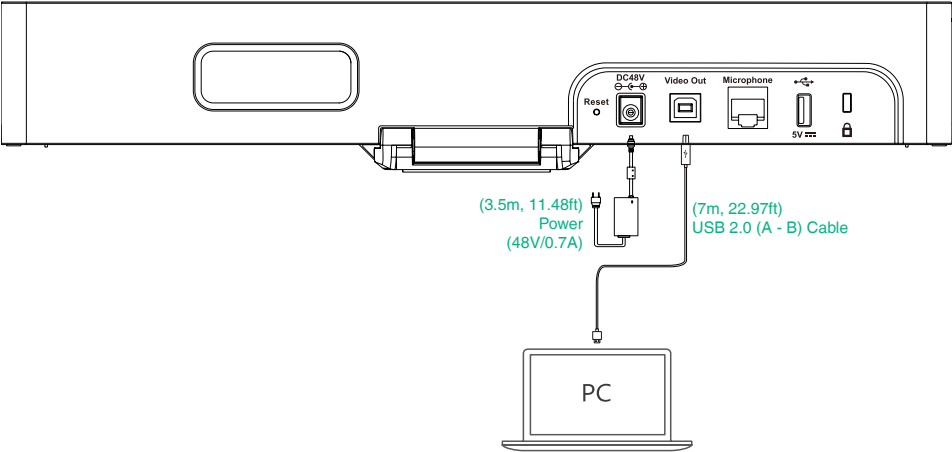


Ensure that UVC34 is the default device of your video conference software after connecting successfully, and you can enjoy its audio and video in the meeting.

LED Indicator Instructions

LED indicators on the UVC34:

LED Status	Description
Off	The UVC34 is powered off.
Solid green	The UVC34 is active.
Flashing green	There is an incoming call.
Solid red	The UVC34 is muted.
Flashing red	The UVC34 is in recovery mode and the firmware has not been upgraded.
Solid orange	The UVC34 is initializing or in sleep mode.
Flashing orange	The UVC34 is upgrading firmware.

VCR20 Remote Control Instructions

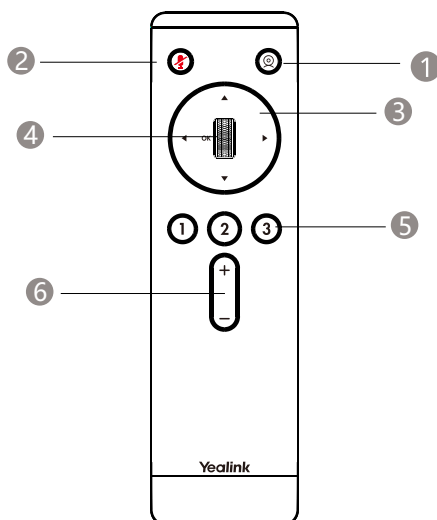


No.	Item	Description
1	Tracking Mode Key	Long press the Tracking Mode key to switch between auto framing and PTZ mode.
2	Mute Key	Mute or unmute the microphone.
3	Navigation Key	Pan and tilt the camera to adjust the viewing angle.
4	Scroll Wheel	• Scroll up to zoom camera in. • Scroll down to zoom camera out.
5	Preset Key	• Long press the number key to add/update the preset position. • Short press the number key to apply the preset position.
6	Volume Key	Adjust the volume.

Upgrade the Firmware

Use Yealink Room Connect/USB Connect software to upgrade the firmware after connecting to the PC.

For more information about how to upgrade the firmware, please refer to the upgrading document.

 包装清单



UVC34




VCR20 遥控器




(7m, 22.97ft)

 USB 2.0 (A - B) 线



(3.5m, 11.48ft)

 电源适配器 (48V/0.7A)



挂墙架



× 2

Φ6 * 30 mm, 白色, 聚酰胺



× 2

4*30 FAHOZN3+ (+)



× 1

1/4inch*12mm

(L70*W50mm)
魔术贴

× 5

(20 * 200 mm)
束线带

快速入门指南

说明：我们推荐使用由亿联提供或经亿联认可的配件。使用未经认可的第三方配件可能会导致性能的下降。




安装 UVC34

- 平放安装


将终端摆放在水平桌面。

- 挂装


当电视厚度范围为 5mm-60mm 时, 进行以下步骤:

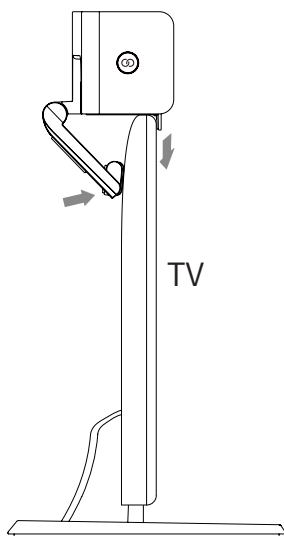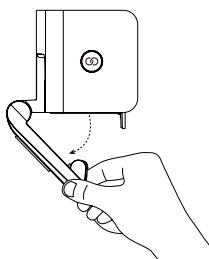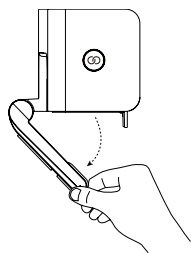

你可以在显示器后方使用 3M 胶保证 UVC34 的稳固。

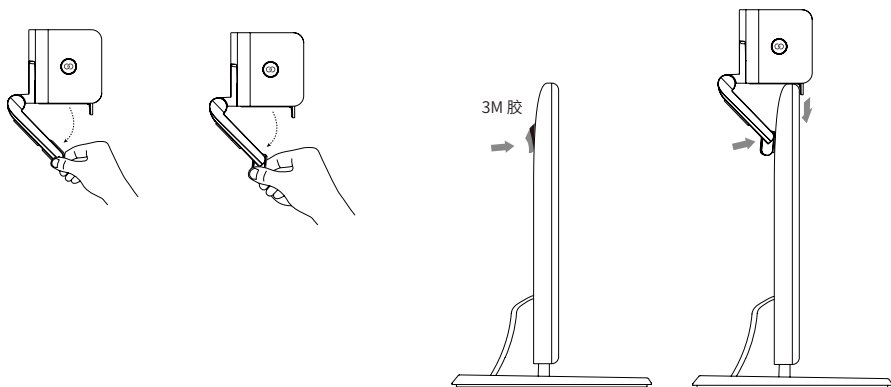


• 墙装

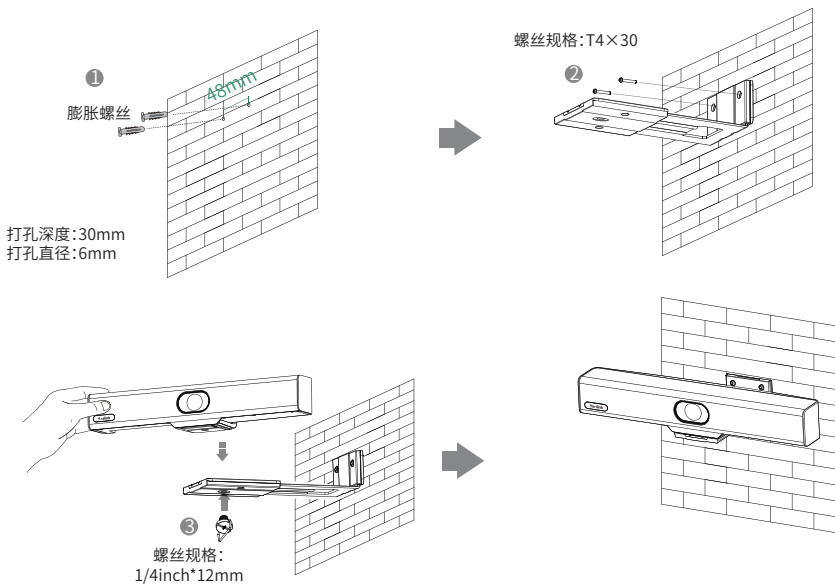


- 安装至电视架或三脚架

用户可以自行选购电视架或三脚架。选购的电视架或三脚架承重至少为 5kg。

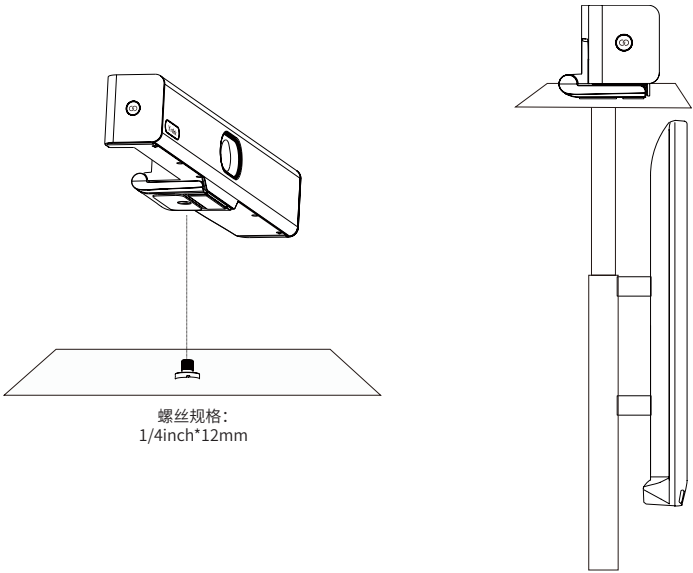

硬件介绍

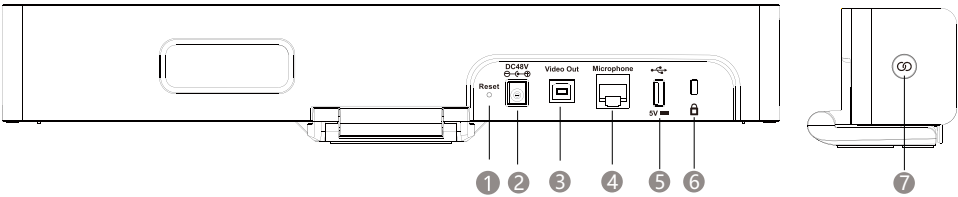

编号	项	功能说明
1	重置	重置设备到出厂设置。
2	电源接口	连接电源适配器。
3	视频输出	连接电脑作为视频输出。
4	麦克风	预留接口。
5	USB 接口	预留接口。
6	安全锁孔	将主机锁在固定位置。
7	配对键	预留按键。